ITEMS INCLUDED

DRY WALL ANCHOR X 4

TILE ANCHOR X 4

#8 SCREW X 4

MOUNTING BRACKET X 2

1/4-28 SET SCREW X 2

1/8" HEX KEY X 1

TOWEL BAR X 1

TOOLS REQUIRED

PHILLIPS SCREW DRIVER 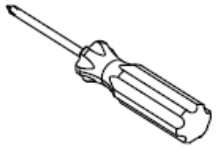

PEN / PENCIL 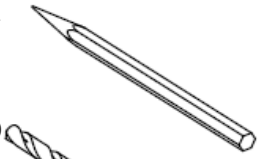

1/4"(6 mm) DRILL 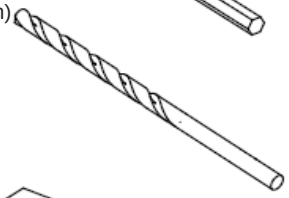

LEVEL SET 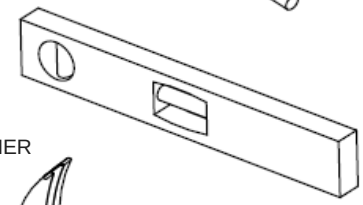

HAMMER 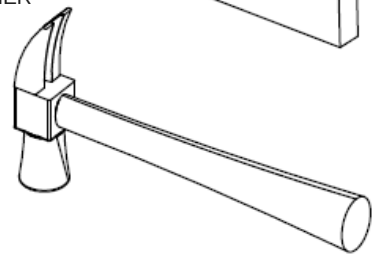

GNG - 4702 4703
EN-1294
REV -

CINU

INSTALLATION INSTRUCTIONS

4702 4703

TOWEL BAR

GINGER
Luxury For Your Lifestyle™

2001 CARNEGIE AVE, SANTA ANA CA 92705
(949) 417-5207
WWW.GINGERCO.COM

1 REMOVE MOUNTING BRACKETS

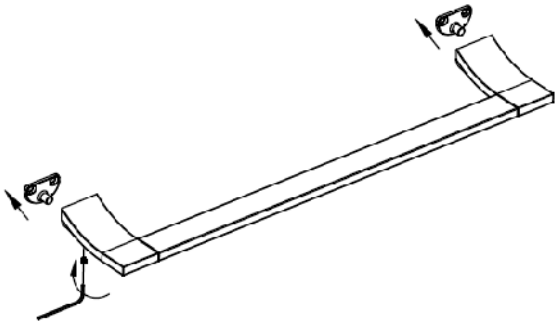

2 ALIGN MOUNTING BRACKETS AND MARK LOCATION

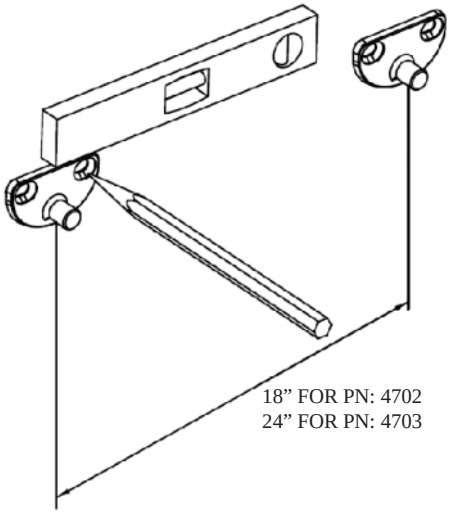

18” FOR PN: 4702
24” FOR PN: 4703

3 DRY WALL INSTALLATION

DO NOT DRILL

USE MARKS
MADE IN STEP 2

TAP IN UNTIL
THREADS ARE
REACHED

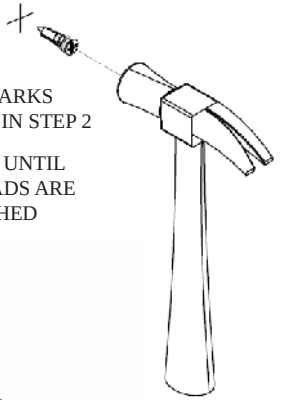

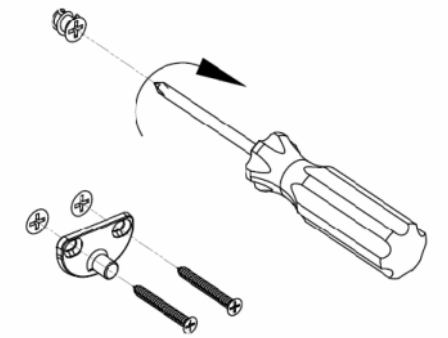

4 TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

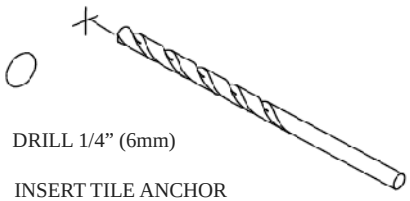

DRILL 1/4” (6mm)

INSERT TILE ANCHOR

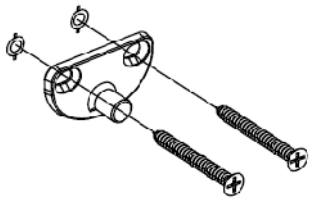

5 INSTALL PRODUCT ONTO BRACKETS

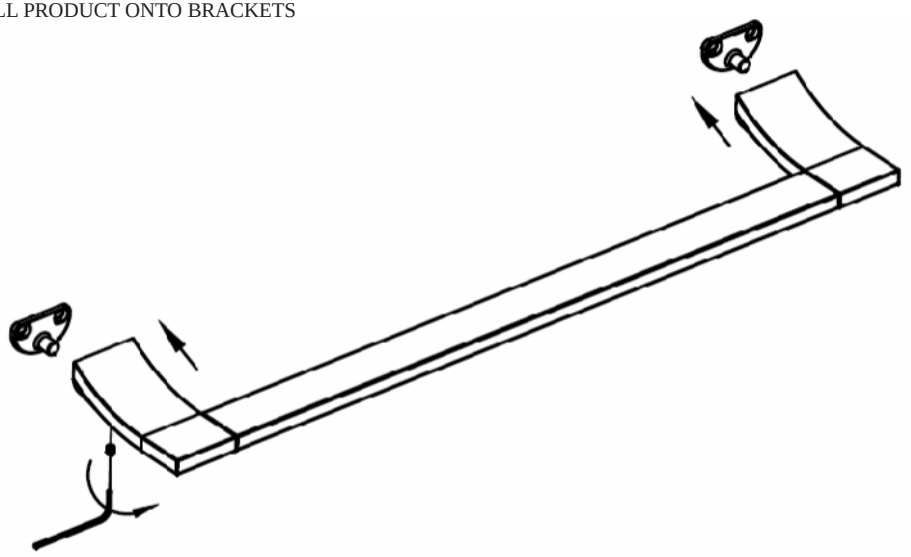

SECURE WITH SET SCREW